



SPLIT TYPE AIR CONDITIONER

INSTRUCTION MANUAL



YHPF32XT2GTTP-R6/ YHPF32YT2GTTPO-6
YHQF32XT2GTTP-R6/ YHQF32YT2GTTPO-6
YHPF38XT2GTTP-R6/ YHPF38YT2GTTPO-6
YHQF38XT2GTTP-R6/ YHQF38YT2GTTPO-6

This instruction manual contains important information and recommendations that we would ask you to comply with to obtain best results from air conditioner.

Thank you once again.

CONTENTS

SAFETY PRECAUTIONS	1
NAMES OF PARTS	4
OPERATION INSTRUCTIONS	6
INSTRUCTIONS FOR SERVICING(R32)	8
INSTALLATION PRECAUTIONS(R32/R410A)	14
INDOOR UNIT INSTALLATION	17
OUTDOOR UNIT INSTALLATION	22
TEST OPERATION	25
MAINTENANCE	26
TROUBLESHOOTING	27
DISPOSAL GUIDELINE (European)	28

* The design and specifications are subject to change without prior notice for product improvement. Consult with the sales agency or manufacturer for details.

* The shape and position of buttons and indicators may vary according to the model, but their function are the same.

SAFETY PRECAUTIONS

SAFETY RULES AND RECOMMENDATIONS FOR THE INSTALLER

1. Read this guide before installing and using the appliance.
2. During the installation of the indoor and outdoor units, access to the working area should be forbidden to children. Unforeseeable accidents could happen.
3. Make sure that the base of the outdoor unit is firmly fixed.
4. Check that air cannot enter the refrigerant system and check for refrigerant leaks when moving the air conditioner.
5. Carry out a test cycle after installing the air conditioner and record the operating data.
6. Protect the indoor unit with a fuse of suitable capacity for the maximum input current or with another overload protection device.
7. Ensure that the mains voltage corresponds to that stamped on the rating plate. Keep the switch or power plug clean. Insert the power plug correctly and firmly into the socket, thereby avoiding the risk of electric shock or fire due to insufficient contact.
8. Check that the socket is suitable for the plug, otherwise have the socket changed.
9. The appliance must be fitted with means for disconnection from the supply mains having a contact separation in all poles that provide full disconnection under "over voltage category III conditions", and these means must be incorporated in the fixed wiring in accordance with the wiring rules.
10. The air conditioner must be installed by professional or qualified technician.
11. Do not install the appliance at a distance of less than 50 cm from inflammable substances (alcohol, etc.) Or from pressurized containers (e.g. spray cans).
12. If the appliance is used in areas without the possibility of ventilation, precautions must be taken to prevent any leaks of refrigerant gas from remaining in the environment and creating a danger of fire.
13. The packaging materials are recyclable and should be disposed of in the separate waste bins. Take the air conditioner at the end of its useful life to a special waste collection center for disposal.
14. Only use the air conditioner as instructed in this booklet. These instructions are not intended to cover every possible condition and situation. As with any electrical household appliance, common sense and caution are therefore always recommended for installation, operation and maintenance.
15. The appliance must be installed in accordance with applicable national regulations. The appliance shall be installed in accordance with national wiring regulations.
16. Before accessing the terminals, all the power circuits must be disconnected from the power supply.
17. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
18. Cleaning and maintenance must be carried out by specialised technical personnel. In any case disconnect the appliance from the mains electricity supply before carrying out any cleaning or maintenance.
19. This appliance has been made for air conditioning domestic environments and must not be used for any other purpose, such as for drying clothes, cooling food, etc.


-
20. Always use the appliance with the air filter mounted. Airconditioning without air filter could cause an excessive accumulation of dust and lead inner parts function failure.
 21. The user is responsible for having the appliance installed by a qualified technician, who must check that it is earthed in accordance with current legislation and insert a thermomagnetic circuit breaker.
 22. The batteries in the remote controller must be recycled or disposed of properly. For disposal of scrap batteries, please discard the batteries as sorted municipal waste at the accessible collection point.
 23. Never remain directly exposed to the flow of cold air for a long time. The direct and prolonged exposition to cold air could be dangerous for your health. Particular care should be taken in the rooms where there are children, old or sick people.
 24. If the appliance gives off smoke or there is a smell of burning, immediately cut off the power supply and contact the Service Centre.
 25. Have repairs carried out only by an authorised Service Centre of the manufacturer. Incorrect repair could expose the user to the risk of electric shock, etc.
 26. Unhook the automatic switch if you foresee not to use the device for a long time. The airflow direction must be properly adjusted.
 27. The flaps must be directed downwards in the heating mode and upwards in the cooling mode.
 28. Ensure that the appliance is disconnected from the power supply when it will remain inoperative for a long period and before carrying out any cleaning or maintenance.
 29. Selecting the most suitable temperature can prevent damage to the appliance.

SAFETY RULES AND PROHIBITIONS


1. Do not bend , tug or compress the power cord since this could damage it. Electrical shocks or fire are probably due to a damaged power cord. Specialised technical personnel only must replace a damaged power cord.
2. Do not use extensions or gang modules.
3. Do not touch the appliance when barefoot or parts of the body are wet or damp.
4. Do not obstruct the air inlet or outlet of the indoor or the outdoor unit. The obstruction of these openings causes a reduction in the operative efficiency of the conditioner with possible consequent failures or damages.
5. In no way alter the characteristics of the appliance.
6. Do not install the appliance in environments where the air could contain gas , oil or sulphur or near sources of heat.
7. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
8. Do not climb onto or place any heavy or hot objects on top of the appliance.
9. Do not leave windows or doors open for long when the air conditioner is operating.
10. Do not direct the airflow onto plants or animals.
11. A long direct exposition to the flow of cold air of the conditioner could have negative effects on plants and animals.
12. Do not put the conditioner in contact with water. The electrical insulation could be damaged and thus causing electrocution.
13. Do not climb onto or place any objects on the outdoor unit
14. Never insert a stick or similar object into the appliance. It could cause injury.
15. Children should be supervised to ensure that they do not play with the appliance. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

NAMES OF PARTS

Indoor Unit

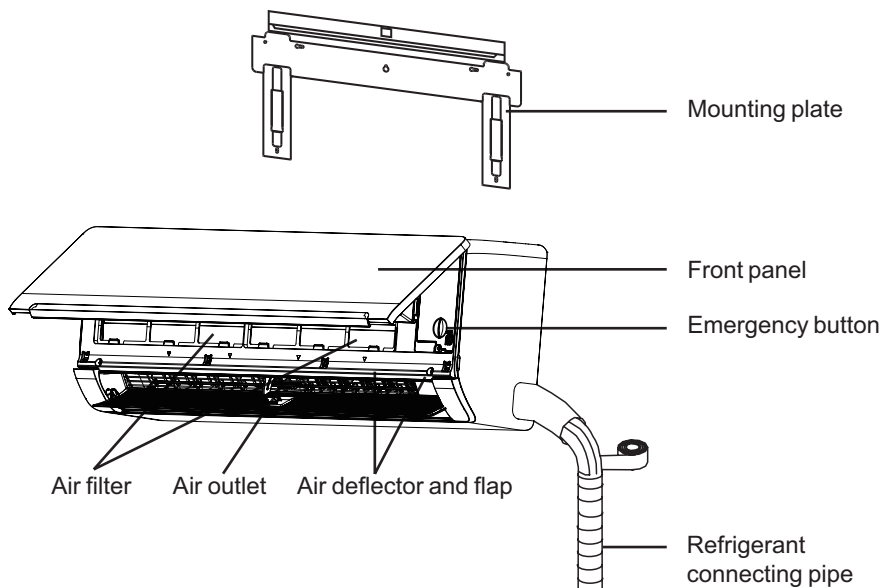

Outdoor Unit

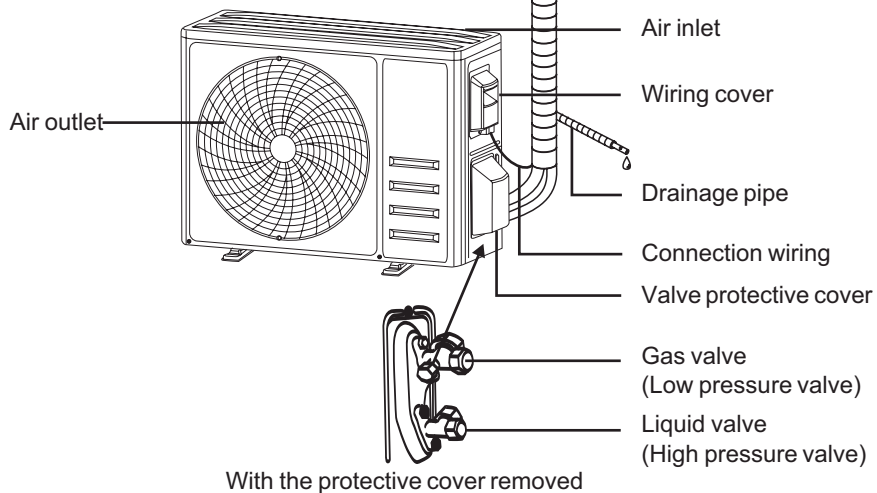

Note: This figure shown may be different from the actual object. Please take the latter as the standard.

INDOOR DISPLAY




No.	Led	Function
1		Indicator for Timer, temperature and Error codes.
2		Lights up during Timer operation.
3		SLEEP mode

 The shape and position of switches and indicators may be different according to the model, but their function is the same.

OPERATION INSTRUCTIONS

The air sucked by the fan enters from the grill and passes through the filter, then it is cooled/dehumidified or heated through the heat exchanger.

The direction of the air outlet is motorized up and down by flaps, and manually moved right and left by the vertical deflectors, for some models, the vertical deflectors could be controlled by motor as well.

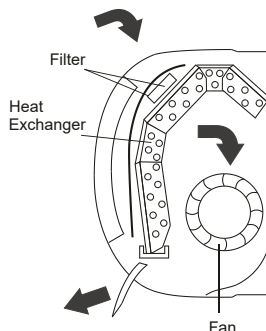

⚠ Attempt to use the air conditioner under the temperature beyond the specified range may cause the air conditioner protection device to start and the air conditioner may fail to operate. Therefore, try to use the air conditioner in the following temperature conditions.

Fixed air conditioner:

MODE Temperature	Heating	Cooling	Dry
Room temperature	0°C~27°C(32°F~80°F)	17°C~32°C(63°F~90°F)	
Outdoor temperature	-7°C~24°C(19°F~75°F)	T1 climate: 15°C~43°C(59°F~109°F)	
		T3 climate: 15°C~52°C(59°F~125°F)	

Inverter air conditioner:

MODE Temperature	Heating	Cooling	Dry
Room temperature	0°C~27°C(32°F~80°F)	17°C~32°C(63°F~90°F)	
Outdoor temperature	-15°C~24°C(5°F~75°F) (Low temperature heating: -20°C~24°C (-4°F~75°F))	T1 climate: 15°C~53°C(59°F~127°F) (Low temperature cooling: -15°C~53°C (5°F~127°F))	
		T3 climate: 15°C~55°C(59°F~131°F)	

With the power supply connected, restart the air conditioner after shutdown, or switch it to other mode during operation, and the air conditioner protection device will start. The compressor will resume operation after 3 minutes.

⚠ Characteristics of heating operation (applicable to Heat pump models)


Preheating: When the heating function is enabled, the indoor unit will take 2~5 minutes for preheating, after that the air conditioner will start heating and blows warm air.

Defrosting: During heating, when the outdoor unit frosted, the air conditioner will enable the automatic defrosting function to improve the heating effect. During defrosting, the indoor and outdoor fans stop running. The air conditioner will resume heating automatically after defrosting finish.

Emergency button:

Open the panel and find the emergency button on the electronic control box when the remote controller fails . (Always press the emergency button with insulation material.)

Current status	Operation	Respond	Enter mode
Standby	Press the emergency button once	It beeps briefly once.	Cooling mode
Standby (Only for Heat pump models)	Press the emergency button twice in 3 seconds	It beeps briefly once.	Heating mode
Running	Press the emergency button once	It keeps beeping for a while	Off mode

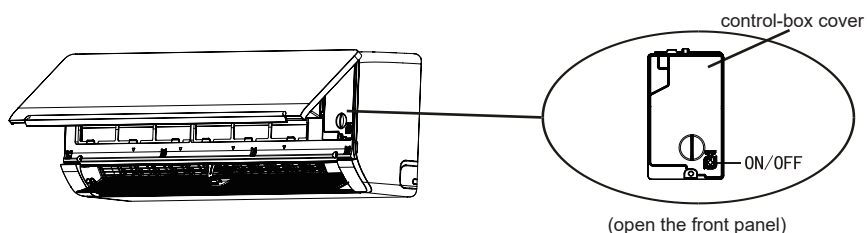

INSTRUCTIONS FOR SERVICING(R32)

1. Check the information in this manual to find out the dimensions of space needed for proper installation of the device, including the minimum distances allowed compared to adjacent structures.
2. Appliance shall be installed, operated and stored in a room with a floor area larger than 4m².
3. The installation of pipe-work shall be kept to a minimum.
4. The pipe-work shall be protected from physical damage, and shall not be installed in an unventilated space if the space is smaller than 4m².
5. The compliance with national gas regulations shall be observed.
6. The mechanical connections shall be accessible for maintenance purposes.
7. Follow the instructions given in this manual for handling, installing, cleaning, maintaining and disposing of the refrigerant.
8. Make sure ventilation openings are clear of any obstruction.
- 9. Notice:** The servicing shall be performed only as recommended by the manufacturer.
- 10. Warning:** The appliance shall be stored in a well-ventilated area where the room size corresponds to the room area as specified for operation.
- 11. Warning:** The appliance shall be stored in a room without continuously operating open flames (for example an operating gas appliance) and ignition sources (for example an operating electric heater).
12. The appliance shall be stored so as to prevent mechanical damage from occurring.
13. It is appropriate that anyone who is called upon to work on a refrigerant circuit should hold a valid and up-to-date certificate from an assessment authority accredited by the industry and recognizing their competence to handle refrigerants, in accordance with the assessment specification recognized in the industrial sector concerned. Service operations should only be carried out in accordance with the recommendations of the equipment manufacturer. Maintenance and repair operations that require the assistance of other qualified persons must be conducted under the supervision of the person competent for the use of flammable refrigerants.
14. Every working procedure that affects safety means shall only be carried out by competent persons.
- 15. Warning:**
 - * Do not use any means to accelerate the defrosting process or clean the frost on your own. Follow the recommended guidelines from the manufacturer.
 - * The appliance shall be stored in a room without continuously operating ignition sources (for example: open flames, an operating gas appliance or an operating electric heater).
 - * Do not pierce or burn.
 - * Be aware that refrigerants may not contain an odor.



Caution: Risk of fire

A2L



Read operator's manual



Operating instructions



Read technical manual

16. Information on servicing:

1) Checks to the area

Prior to beginning work on systems containing flammable refrigerants, safety checks are necessary to ensure that the risk of ignition is minimized. For repair to the refrigerating system, the following precautions shall be complied with prior to conducting work on the system.

2) Work procedure

Work shall be undertaken under a controlled procedure so as to minimize the risk of a flammable gas or vapor being present while the work is being performed.

3) General work area

All maintenance staff and others working in the local area shall be instructed on the nature of work being carried out. Work in confined spaces shall be avoided. The area around the workspace shall be sectioned off. Ensure that the conditions within the area have been made safe by control of flammable material.

4) Checking for presence of refrigerant

The area shall be checked with an appropriate refrigerant detector prior to and during work, to ensure the technician is aware of potentially flammable atmospheres. Ensure that the leak detection equipment being used is suitable for use with flammable refrigerants, i.e. non-sparking, adequately sealed or intrinsically safe.

5) Presence of fire extinguisher

If any hot work is to be conducted on the refrigeration equipment or any associated parts, appropriate fire extinguishing equipment shall be available to hand. Have a dry powder or CO 2 fire extinguisher adjacent to the charging area.

6) No ignition sources

No person carrying out work in relation to a refrigeration system which involves exposing any pipe work shall use any sources of ignition in such a manner that it may lead to the risk of fire or explosion. All possible ignition sources, including cigarette smoking, should be kept sufficiently far away from the site of installation, repairing, removing and disposal, during which refrigerant can possibly be released to the surrounding space. Prior to work taking place, the area around the equipment is to be surveyed to make sure that there are no flammable hazards or ignition risks. "No Smoking" signs shall be displayed.

7) Ventilated area

Ensure that the area is in the open or that it is adequately ventilated before breaking into the system or conducting any work that will produce heat. A degree of ventilation shall continue during the period that the work is carried out. The ventilation should safely disperse any released refrigerant and preferably expel it externally into the atmosphere.

8) Checks to the refrigeration equipment

Where electrical components are being changed, they shall be fit for the purpose and to the correct specification. At all times the manufacturer's maintenance and service guidelines shall be followed. If in doubt consult the manufacturer's technical department for assistance.

The following checks shall be applied to installations using flammable refrigerants:

- The charge size is in accordance with the room size within which the refrigerant containing parts are installed;
- The ventilation machinery and outlets are operating adequately and are not obstructed;
- If an indirect refrigerating circuit is being used, the secondary circuit shall be checked for the presence of refrigerant;
- Marking to the equipment continues to be visible and legible. Markings and signs that are

illegible shall be corrected;

-- Refrigeration pipe or components are installed in a position where they are unlikely to be exposed to any substance which may corrode refrigerant containing components, unless the components are constructed of materials which are inherently resistant to being corroded or are suitably protected against being so corroded.

9) Checks to electrical devices

Repair and maintenance to electrical components shall include initial safety checks and component inspection procedures. If a fault exists that could compromise safety, then no electrical supply shall be connected to the circuit until it is satisfactorily dealt with. If the fault cannot be corrected immediately but it is necessary to continue operation, an adequate temporary solution shall be used. This shall be reported to the owner of the equipment so all parties are advised.

Initial safety checks shall include:

-- That capacitors are discharged: this shall be done in a safe manner to avoid possibility of sparking;

-- That no live electrical components and wiring are exposed while charging, recovering or purging the system;

-- That there is continuity of earth bonding.

17. Repairs to sealed components

1) During repairs to sealed components, all electrical supplies shall be disconnected from the equipment being worked upon prior to any removal of sealed covers, etc. If it is absolutely necessary to have an electrical supply to equipment during servicing, then a permanently operating form of leak detection shall be located at the most critical point to warn of a potentially hazardous situation.

2) Particular attention shall be paid to the following to ensure that by working on electrical components, the casing is not altered in such a way that the level of protection is affected. This shall include damage to cables, excessive number of connections, terminals not made to original specification, damage to seals, incorrect fitting of glands, etc. Ensure that apparatus is mounted securely. Ensure that seals or sealing materials have not degraded such that they no longer serve the purpose of preventing the ingress of flammable atmospheres. Replacement parts shall be in accordance with the manufacturer's specifications.

NOTE: The use of silicon sealant may inhibit the effectiveness of some types of leak detection equipment. Intrinsically safe components do not have to be isolated prior to working on them.

18. Repair to intrinsically safe components

Do not apply any permanent inductive or capacitance loads to the circuit without ensuring that this will not exceed the permissible voltage and current permitted for the equipment in use. Intrinsically safe components are the only types that can be worked on while live in the presence of a flammable atmosphere. The test apparatus shall be at the correct rating. Replace components only with parts specified by the manufacturer. Other parts may result in the ignition of refrigerant in the atmosphere from a leak.

19. Cabling

Check that cabling will not be subject to wear, corrosion, excessive pressure, vibration, sharp edges or any other adverse environmental effects. The check shall also take into account the effects of aging or continual vibration from sources such as compressors or fans.

20. Detection of flammable refrigerants

Under no circumstances shall potential sources of ignition be used in the searching for or detection of refrigerant leaks. A halide torch (or any other detector using a naked flame) shall not be used.

21. Leak detection methods

The following leak detection methods are deemed acceptable for systems containing flammable refrigerants. Electronic leak detectors shall be used to detect flammable refrigerants, but the sensitivity may not be adequate, or may need re-calibration. (Detection equipment shall be calibrated in a refrigerant-free area). Ensure that the detector is not a potential source of ignition and is suitable for the refrigerant used. Leak detection equipment shall be set at a percentage of the LFL of the refrigerant and shall be calibrated to the refrigerant employed and the appropriate percentage of gas (25 % maximum) is confirmed. Leak detection fluids are suitable for use with most refrigerants but the use of detergents containing chlorine shall be avoided as the chlorine may react with the refrigerant and corrode the copper pipe-work. If a leak is suspected, all naked flames shall be removed/ extinguished. If a leakage of refrigerant is found which requires brazing, all of the refrigerant shall be recovered from the system, or isolated (by means of shut off valves) in a part of the system remote from the leak. Oxygen free nitrogen (OFN) shall then be purged through the system both before and during the brazing process.

22. Removal and evacuation

When breaking into the refrigerant circuit to make repairs or for any other purpose conventional procedures shall be used. However, it is important that best practice is followed since inflammability is a consideration. The following procedure shall be adhered to:

- Remove refrigerant;
- Purge the circuit with inert gas;
- Evacuate;
- Purge again with inert gas;
- Open the circuit by cutting or brazing.

The refrigerant charge shall be recovered into the correct recovery cylinders. The system shall be flushed with OFN to render the unit safe. This process may need to be repeated several times. Compressed air or oxygen shall not be used for this task.

Flushing shall be achieved by breaking the vacuum in the system with OFN and continuing to fill until the working pressure is achieved, then venting to atmosphere, and finally pulling down to a vacuum. This process shall be repeated until no refrigerant is within the system. When the final OFN charge is used, the system shall be vented down to atmospheric pressure to enable work to take place. This operation is absolutely vital if brazing operations on the pipe-work are to take place.

Ensure that the outlet for the vacuum pump is not close to any ignition sources and there is ventilation available.

23. Decommissioning

Before carrying out this procedure, it is essential that the technician is completely familiar with the equipment and all its detail. It is recommended good practice that all refrigerants are recovered safely. Prior to the task being carried out, an oil and refrigerant sample shall be taken in case analysis is required prior to re-use of reclaimed refrigerant. It is essential that electrical power is available before the task is commenced.

- 1) Become familiar with the equipment and its operation.
- 2) Isolate system electrically.

3) Before attempting the procedure, ensure that:

- mechanical handling equipment is available, if required, for handling refrigerant cylinders;
- all personal protective equipment is available and being used correctly;
- the recovery process is supervised at all times by a competent person;
- recovery equipment and cylinders conform to the appropriate standards.

4) Pump down refrigerant system, if possible.

5) If a vacuum is not possible, make a manifold so that refrigerant can be removed from various parts of the system.

7) Make sure that the cylinder is situated on the scales before recovery takes place.

8) Start the recovery machine and operate in accordance with manufacturer's instructions.

9) Do not overfill cylinders. (No more than 80 % volume liquid charge).

10) Do not exceed the maximum working pressure of the cylinder, even temporarily.

11) When the cylinders have been filled correctly and the process completed, make sure that the cylinders and the equipment are removed from site promptly and all isolation valves on the equipment are closed off.

12) Recovered refrigerant shall not be charged into another refrigeration system unless it has been cleaned and checked.

24. Labeling

Equipment shall be labeled stating that it has been de-commissioned and emptied of refrigerant. The label shall be dated and signed. Ensure that there are labels on the equipment stating the equipment contains flammable refrigerant.

25. Recovery

When removing refrigerant from a system, either for servicing or decommissioning, it is recommended good practice that all refrigerants are removed safely.

When transferring refrigerant into cylinders, ensure that only appropriate refrigerant recovery cylinders are employed. Ensure that the correct number of cylinders for holding the total system charge are available. All cylinders to be used are designated for the recovered refrigerant and labeled for that refrigerant (i.e. Special cylinders for the recovery of refrigerant). Cylinders shall be complete with pressure-relief valve and associated shut-off valves in good working order. Empty recovery cylinders are evacuated and, if possible, cooled before recovery occurs.

The recovery equipment shall be in good working order with a set of instructions concerning the equipment that is at hand and shall be suitable for the recovery of all appropriate refrigerants including, when applicable, flammable refrigerants. In addition, a set of calibrated weighing scales shall be available and in good working order. Hoses shall be complete with leak-free disconnect couplings and in good condition. Before using the recovery machine, check that it is in satisfactory working order, has been properly maintained and that any associated electrical components are sealed to prevent ignition in the event of a refrigerant release. Consult manufacturer if in doubt.

The recovered refrigerant shall be returned to the refrigerant supplier in the correct recovery cylinder, and the relevant waste transfer note arranged. Do not mix refrigerants in recovery units and especially not in cylinders.

If compressors or compressor oils are to be removed, ensure that they have been evacuated to an acceptable level to make certain that flammable refrigerant does not remain within the lubricant.

The evacuation process shall be carried out prior to returning the compressor to the suppliers.

Only electric heating to the compressor body shall be employed to accelerate this process. When oil is drained from a system, it shall be carried out safely.

26. Warning:

- Do not use means to accelerate the defrosting process or to clean, other than those recommended by the manufacturer;
- The appliance shall be stored in a room without continuously operating ignition sources (for example: open flames, an operating gas appliance or an operating electric heater.
- Do not pierce or burn.
- Be aware that refrigerants may not contain an odour.

27. Statement

- 1) Please use the flammable gas detector to check before unload and open the container.
- 2) No fire source and smoking.
- 3) That pipe work shall be protected from physical damage and, in the case of FLAMMABLE REFRIGERANTS, shall not be installed in an unventilated space, if that space is smaller than Amin in Annex GG, except for A2L REFRIGERANTS where the installed pipes comply with 22.116. In case of field charge, the effect on REFRIGERANT CHARGE caused by the different pipe length has to be quantified;
- 4) That compliance with national gas regulations shall be observed;
- 5) The mechanical connections made in accordance with 22.118 shall be accessible for maintenance purposes,
- 6) That pipe work including piping material, pipe routing, and installation shall include protection from physical damage in operation and service, and be in compliance with national and local codes and standards, such as ASHRAE 15, ASHRAE 15.2, IAPMO Uniform Mechanical Code, ICC International Mechanical Code, or CSA B52. All field joints shall be accessible for inspection prior to being covered or enclosed;
- 7) That after completion of field piping for split systems, the field pipe work shall be pressure tested with an inert gas and then vacuum tested prior to refrigerant charging, according to the following requirements;
- 8) The appliance shall be stored so as to prevent mechanical damage from occurring.
- 9) Working personnel for maintenance, service and repair operations. Every working procedure that affects safety means shall only be carried out by competent persons according to Annex HH. Examples for such working procedures are:
 - breaking into the refrigerating circuit;
 - opening of sealed components;
 - opening of ventilated enclosures.

INSTALLATION PRECAUTIONS(R32/R410A)

Important Considerations

- 1.The air conditioner must be installed by professional personnel and the Installation manual is used only for the professional installation personnel! The installation specifications should be subject to our after-sale service regulations.
- 2.When filling the combustible refrigerant, any of your rude operations may cause serious injury or injuries to human body and objects.
- 3.A leak test must be done after the installation completed.
- 4.It is a must to do the safety inspection before maintaining or repairing an air conditioner using combustible refrigerant in order to ensure that the fire risk is reduced to minimum.
- 5.It is necessary to operate the machine under a controlled procedure in order to ensure that any risk arising from the combustible gas or vapor during the operation is reduced to minimum.
- 6.Requirements for the total weight of filled refrigerant and the area of a room to be equipped with an air conditioner (are shown as in the following Tables GG.1 and GG.2)

The maximum charge and the required minimum floor area

$$m_1 = (4 \text{ m}^3) \times \text{LFL}, m_2 = (26 \text{ m}^3) \times \text{LFL}, m_3 = (130 \text{ m}^3) \times \text{LFL}$$

Where LFL is the lower flammable limit in kg/ m³,R32 LFL is 0.306 kg/ m³.

For the appliances with a charge amount $m_1 < M = m_2$:

The maximum charge in a room shall be in accordance with the following:

$$M_{\max} = 2.5 \times (\text{LFL})^{(5/4)} \times h_0 \times (A)^{1/2}$$

The required minimum floor area $A_{\min}$ to install an appliance with refrigerant charge $M(\text{kg})$ shall be in accordance with following: $A_{\min} = (M / (2.5 \times (\text{LFL})^{(5/4)} \times h_0))^2$

Where:

Table GG.1 - Maximum charge (kg)

Category	LFL (kg/m ³)	h ₀ (m)	Floor area (m ²)						
			4	7	10	15	20	30	50
R32	0.306	1	1.14	1.51	1.8	2.2	2.54	3.12	4.02
		1.8	2.05	2.71	3.24	3.97	4.58	5.61	7.254
		2.2	2.5	3.31	3.96	4.85	5.6	6.86	8.85

Table GG.2 - Minimum room area (m²)

Category	LFL (kg/m ³)	h ₀ (m)	Charge amount (M) (kg) Minimum room area (m ²)						
			1.224kg	1.836kg	2.448kg	3.672kg	4.896kg	6.12kg	7.956kg
R32	0.306			29	51	116	206	321	543
		0.6		10	19	42	74	116	196
		1		3	6	13	23	36	60
		1.8		2	4	9	15	24	40

Installation Safety Principles

1. Site Safety



Open Flames Prohibited



Ventilation Necessary

2. Operation Safety



Mind Static Electricity



Must wear protective
clothing and anti-static gloves



Don't use mobile phone

3. Installation Safety

- Refrigerant Leak Detector
- Appropriate Installation Location



The left picture is the schematic diagram of a refrigerant leak detector.

Please note that:

- 1) The installation site should be well-ventilated.
- 2) The sites for installing and maintaining an air conditioner using Refrigerant R32 should be free from open fire or welding, smoking, drying oven or any other heat source higher than 548 which easily produces open fire.
- 3) When installing an air conditioner, it is necessary to take appropriate anti-static measures such as wear anti-static clothing and/or gloves.
- 4) It is necessary to choose the site convenient for installation or maintenance wherein the air inlets and outlets of the indoor and outdoor units should be not surrounded by obstacles or close to any heat source or combustible and/or explosive environment.
- 5) If the indoor unit suffers refrigerant leak during the installation, it is necessary to immediately turn off the valve of the outdoor unit and all the personnel should go out till the refrigerant leaks completely for 15 minutes. If the product is damaged, it is a must to carry such damaged product back to the maintenance station and it is prohibited to weld the refrigerant pipe or conduct other operations on the user's site.
- 6) It is necessary to avoid the places where there are other electrical products, power switch plugs and sockets, kitchen cabinet, bed, sofa and other valuables right under the lines on two sides of the indoor unit.

Suggested Tools

Tool	Picture	Tool	Picture	Tool	Picture
Standard Wrench		Pipe Cutter		Vacuum Pump	
Adjustable/ Crescent Wrench		Screw drivers (Phillips & Flat blade)		Safety Glasses	
Torque Wrench		Manifold and Gauges		Work Gloves	
Hex Keys or Allen Wrenches		Level		Refrigerant Scale	
Drill & Drill Bits		Flaring tool		Micron Gauge	
Hole Saw		Clamp on Amp Meter			

Pipe Length and Additional Refrigerant

Inverter Models Capacity (Btu/h)	9K-12K		18K-24K		30K-36K	
Length of pipe with standard charge	5m/16ft	5m/16ft	5m/16ft	5m/16ft	5m/16ft	5m/16ft
Maximum distance between indoor and outdoor units	15m/49ft	15m/49ft	20m/65ft	20m/65ft	30m/98ft	30m/98ft
Additional refrigerant charge	15g/m	10g/m	15g/m	10g/m	15g/m	10g/m
Max. diff. in level between indoor and outdoor unit	10m/32ft	10m/32ft	10m/32ft	10m/32ft	10m/32ft	10m/32ft
Type of refrigerant	R410A	R32	R410A	R32	R410A	R32

Torque Parameters

PIPE Size	Newton meter[N x m]	Pound-force foot (lbf-ft)	Kilogram-force meter (kgf-m)
1/4"(φ6.35)	15 - 20	11.1 - 14.8	1.5 - 2.0
3/8"(φ9.52)	31 - 35	22.9 - 25.8	3.2 - 3.6
1/2"(φ12)	45 - 50	33.2 - 36.9	4.6 - 5.1
5/8"(φ15.88)	60 - 65	44.3 - 48.0	6.1 - 6.6


⚠ Note: This table is only for reference, the installation shall meet the requirements of local laws and regulations.

INDOOR UNIT INSTALLATION

Step1: Select Installation location


- 1) Ensure the installation complies with the installation minimum dimensions (defined below) and meets the minimum and maximum connecting piping length and maximum change in elevation as defined in the System Requirements section.
- 2) Air inlet and outlet will be clear of obstructions, ensuring proper airflow throughout the room.
- 3) Condensate can be easily and safely drained.
- 4) All connections can be easily made to outdoor unit.
- 5) Indoor unit is out of reach of children.
- 6) A mounting wall strong enough to withstand four times the full weight and vibration of the unit.
- 7) Filter can be easily accessed for cleaning.
- 8) Leave enough free space to allow access for routine maintenance.
- 9) Install at least 10 ft. (3 m) away from the antenna of TV set or radio. Operation of the air conditioner may interfere with radio or TV reception in areas where reception is weak. An amplifier may be required for the affected device.
- 10) Do not install in a laundry room or by a swimming pool due to the corrosive environment.
- 11) For ETL certification area, Caution: Mount with the lowest moving parts at least 8 ft. (2.4 m) above floor or grade level.

Minimum Indoor Clearances

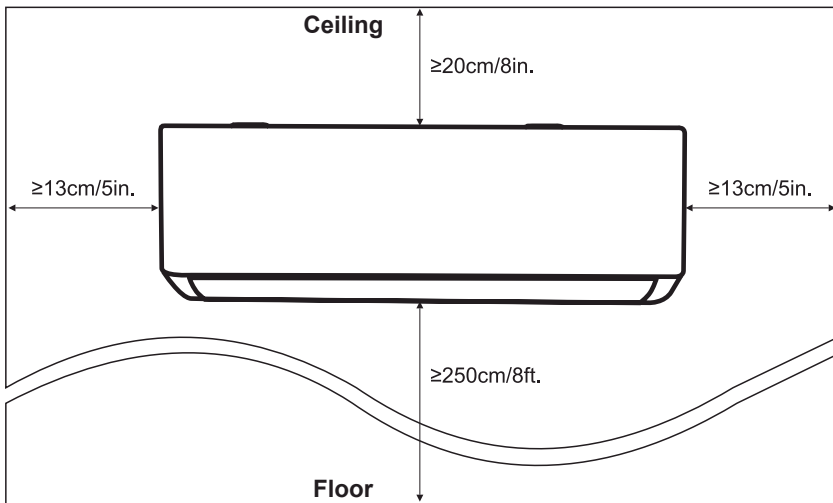

Step2: Install Mounting Plate

- 1) Take the mounting plate from the back of indoor unit.
- 2) Ensure to meet the minimum installation dimension requirements as step 1, according to the size of mounting plate, determine the position and stick the mounting plate close to the wall.
- 3) Adjust the mounting plate to a horizontal state with a spirit level, then mark out the screw hole positions on the wall.
- 4) Put down the mounting plate and drill holes in the marked positions with drill.
- 5) Insert expansion rubber plugs into the holes, then hang the mounting plate and fix it with screws.

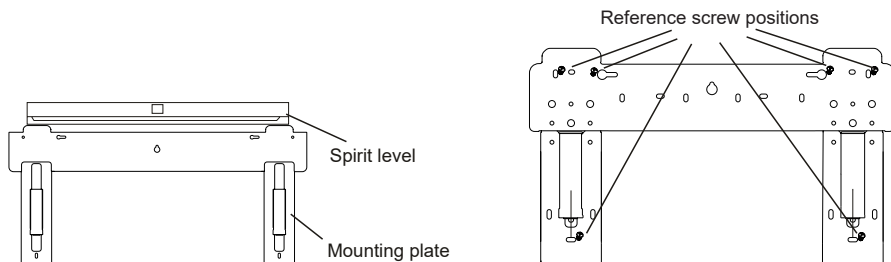



Note:

1. Make sure the mounting plate is firm enough and flat against the wall after installation.
2. This figure shown may be different from the actual object, please take the latter as the standard.

Step3: Drill Wall Hole

A hole in the wall should be drilled for refrigerant piping ,the drainage pipe, and connecting cables.


- 1) Determine the location of wall hole base on the position of mounting plate.
- 2) The hole should be have a 70mm diameter at least and a small oblique angle to facilitate drainage.
- 3) Drill the wall hole with 70mm core drill and with small oblique angle lower than the indoor end about 5mm to 10mm.
- 4) Place the wall sleeve and wall sleeve cover(both are optional parts) to protect the connection parts.

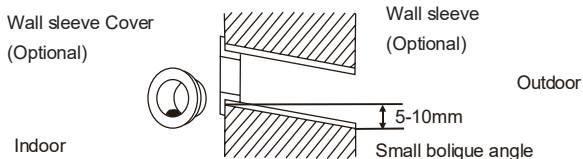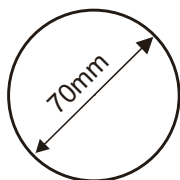


Step4: Connecting Refrigerant Pipe

- 1) According to the wall hole position, select the appropriate piping mode. There are three optional piping modes for indoor units as shown in the figure below: In Piping Mode 1 or Piping Mode 3, a notch should be made by using scissors to cut the plastic sheet of piping outlet and cable outlet on the corresponding side of the indoor unit.


Note: When cutting off the plastic sheet at the outlet, the cut should be trimmed to smooth.

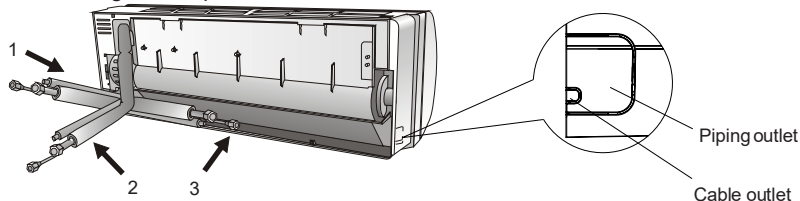


- 2) Bending the connecting pipes with the port facing up as shown in the figure.

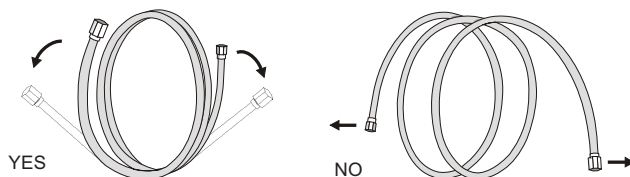

- 3) Take off the plastic cover in the pipe ports and take off the protective cover on the end of piping connectors.
- 4) Check whether there is any sundry on the port of the connecting pipe and make ensure the port is clean.
- 5) After align the center, rotate the nut of the connecting pipe to tighten the nut as tightly as possible by hand.
- 6) Use a torque wrench to tighten it according to the torque values in the torque requirements table; (Refer to the torque requirements table on section INSTALLATION PRECAUTIONS)

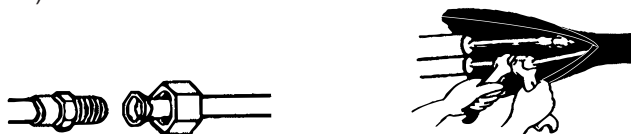


Note: For R32 refrigerant, the connectors should be placed outdoor.

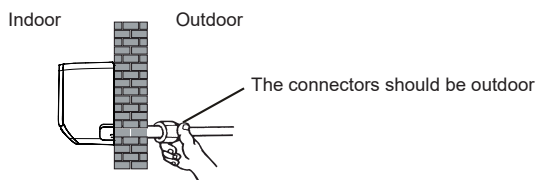

Step5: Connect Drainage Hose

1) Adjust the drainage hose(if applicable)


In some model, both sides of the indoor unit are provided with drainage ports, you can choose one of them to attach the drainage hose. And plug the unused drain port with the rubber attached in one of the ports.

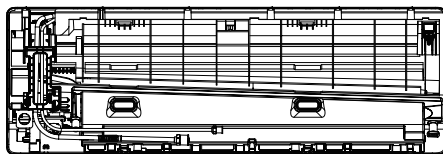

Drainage ports



- 2) Connect the drainage hose to the drainage port, ensure the joint is firm and the sealing effect is good.
- 3) Wrap the joint firmly with teflon tape to ensure no leaks.

Note: Make sure there is no twists or dents, and the pipes should be placed obliquely downward to avoid blockage, to ensure proper drainage.

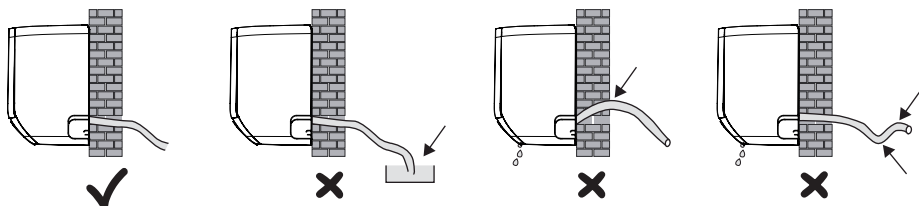

Step6: Connect Wiring


- 1) Choose the right cables size determined by the maximum operating current on the nameplate. (Check the cables size refer to section **INSTALLATION PRECAUTIONS**)
- 2) Open the front panel of indoor unit.
- 3) Use a screwdriver, open the electric control box cover, to reveal the terminal block.
- 4) Unscrew the cable clamp.
- 5) Insert one end of the cable into the position of control box from the back of the right end of the indoor unit.
- 6) Connect the wires to corresponding terminal according to the wiring diagram on the electric control box cover. And make sure that they are well connected.
- 7) Screw the cable clamp to fasten the cables.
- 8) Reinstall the electric control box cover and front panel.

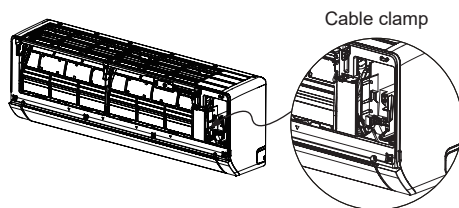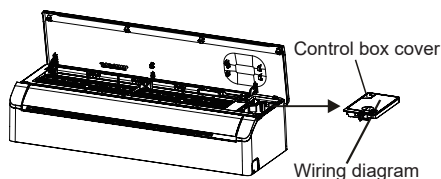

Step7: Wrap Piping and Cable

After the refrigerant pipes, connecting wires and drainage hose are all installed, in order to save space, protect and insulate them, it must be bundle with insulating tape before passing them through the wall hole.


- 1) Arrange the pipes ,cables and drainage hose well as the following picture.



Note: (I) Make sure the drainage hose is at the bottom.

(II) Avoid crossing and bending of parts.

- 2) Using the insulating tape wrap the refrigerant pipes, connecting wires and drainage hose together tightly.

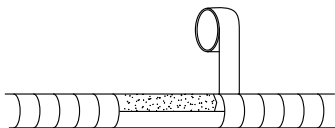


Step8: Mount Indoor Unit

1. Slowly pass the refrigerant pipes, connecting wires and drainage hose wrapped bundle through the wall hole.
2. Hook the top of indoor unit on the mounting plate.
3. Apply slight pressure to the left and right sides of the indoor unit, make sure the indoor unit is hooked firmly.
4. Push down the bottom of indoor unit to let the snaps onto the hooks of the mounting plate, and make sure it is hooked firmly.


Sometimes, if the refrigerant pipes were already embedded in the wall, or if you want to connect the pipes and wires on the wall, do as below:

- 1) Grab both ends of the bottom plate, apply a little outward force to take off the bottom plate.
- 2) Hook the top of the indoor unit on the mounting plate without piping and wiring.
- 3) Lift the indoor unit opposite the wall, unfold the bracket on the mounting plate, and use this bracket to prop up the indoor unit, there would be a big space for installation operation.
- 4) Do the refrigerant piping, wiring, connect drainage hose, and wrap them as Step 4 to 7.
- 5) Put the supporting bracket back to the mounting plate.
- 6) Push down the bottom of indoor unit to let the snaps onto the bottom hooks of the mounting plate, and make sure it firmly hooked .
- 7) Re-assemble the bottom plate of the indoor unit.

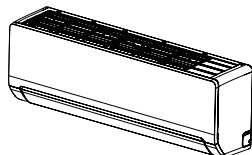


Take off the bottom plateU

+

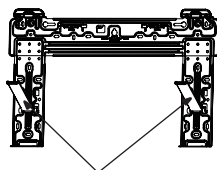

nfold the bracket on the mounting plat

→

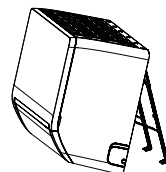


OUTDOOR UNIT INSTALLATION

Step1: Select Installation Location


Select a site that allows for the following:

1. Do not install the outdoor unit near sources of heat, steam or flammable gas.
2. Do not install the unit in too windy or dusty places.
3. Do not install the unit where people often pass. Select a place where the air discharge and operating sound will not disturb the neighbors.
4. Avoid installing the unit where it will be exposed to direct sunlight (other wise use a protection, if necessary, that should not interfere with the air flow).
5. Reserve the spaces as shown in the picture for the air to circulate freely.
6. Install the outdoor unit in a safe and solid place.
7. If the outdoor unit is subject to vibration, place rubber blankets onto the feet of the unit.

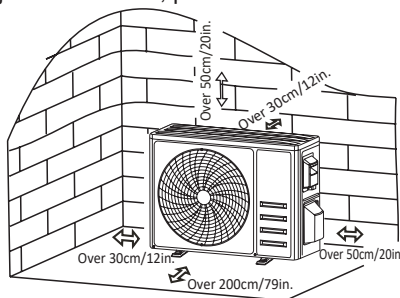

Step2: Install Drainage Hose

1. This step only for heat pump models or RCACs.
2. Insert the drainage joint to the hole at the bottom of the outdoor unit.
3. Connect the drainage hose to the joint and make the connection well enough.

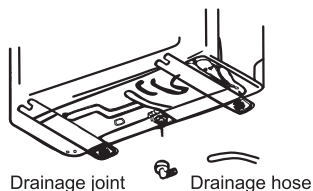


Step3: Fix Outdoor Unit

1. According to the outdoor unit installation dimensions to mark the installation position for expansion bolts .
2. Drill holes and clean the concrete dust and place the bolts .
3. If applicable install 4 rubber blankets on the hole before place the outdoor unit (Optional). This will reduce vibrations and noise.
4. Place the outdoor unit base on the bolts and pre-drilled holes.
5. Use wrench to fix the outdoor unit firmly with bolts.

Note:

The outdoor unit can be fixed on a wall-mounting bracket. Follow the instruction of the wall-mounting bracket to fix the wall-mounting bracket on the wall, and then fasten the outdoor unit on it and keep it horizontal.

The wall-mounting bracket must be able to support at least 4 times of the weight of outdoor unit.

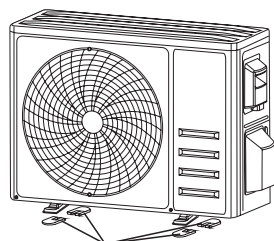


Install 4 rubber blankets (Optional)

Step4: Install Wiring


1. Use a phillips screwdriver to unscrew wiring cover, grasp and press it down gently to take it down.
2. Unscrew the cable clamp and take it down.
3. According to the wiring diagram pasted inside the wiring cover, connect the connecting wires to the corresponding terminals, and ensure all connections are firmly and securely.
4. Reinstall the cable clamp and wiring cover.

Note: When connecting the wires of indoor and outdoor units, the power should be cut off.

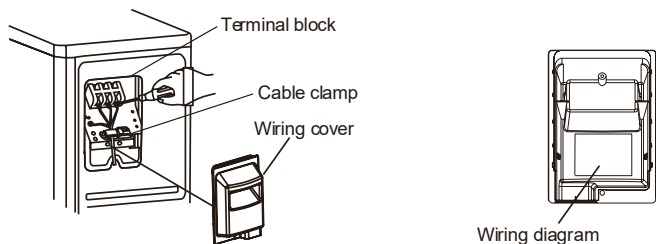


Step5: Connecting Refrigerant Pipe

1. Unscrews the valve cover, grasp and press it down gently to take it down(if the valve cover is applicable).
2. Remove the protective caps from the end of valves.
3. Take off the plastic cover in the pipe ports and check whether there is any sundry on the port of the connecting pipe and make ensure the port is clean.
4. After aligning the center, rotate the flare nut of the connecting pipe to tighten the nut as tightly as possible by hand.
5. Use a spanner to hold the body of the valve and use a torque wrench to tighten the flare nut according to the torque values in the torque requirements table. (Refer to the torque requirements table on section **INSTALLATION PRECAUTIONS**)

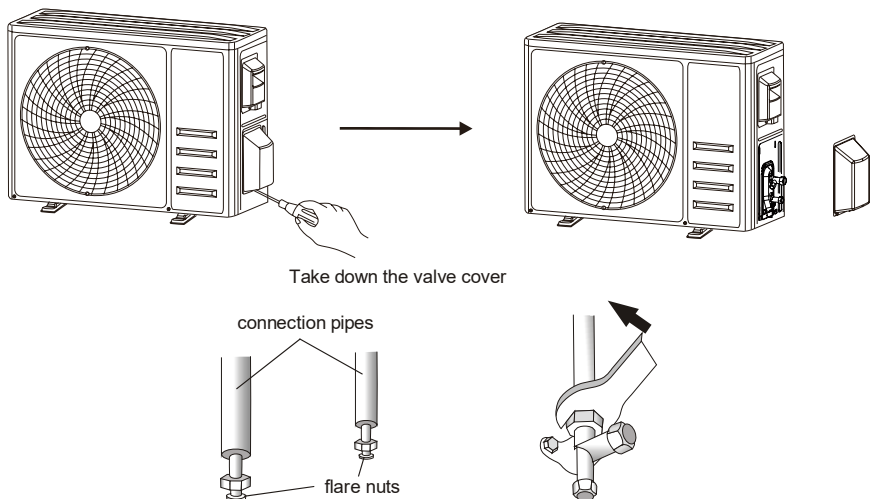

Step6: Vacuum Pumping

1. Use a spanner to take down the protective caps from the service port, low pressure valve and high pressure valve of the outdoor unit.
2. Connect the pressure hose of manifold gauge to the service port on the outdoor unit low pressure valve.
3. Connect the charge hose from the manifold gauge to the vacuum pump.
4. Open the low pressure valve of the manifold gauge and close the high pressure valve.
5. Turn on the vacuum pump to vacuum the system.
6. The vacuum time should not be less than 15 minutes, or make sure the compound gauge indicates -0.1 MPa (-76 cmHg)
7. Close the low pressure valve of the manifold gauge and turn off the vacuum.
8. Hold the pressure for 5 minutes, make sure that the rebound of compound gauge pointer does not exceed 0.005 MPa.
9. Open the low pressure valve counterclockwise for 1/4 turn with hexagonal wrench to let a little refrigerant fill in the system, and close the low pressure valve after 5 seconds and quickly remove the pressure hose.
10. Check all indoor and outdoor joints for leakage with soapy water or leak detector.
11. Fully open the low pressure valve and high pressure valve of the outdoor unit with hexagonal wrench.
12. Reinstall the protective caps of the service port, low pressure valve and high pressure valve of the outdoor unit.
13. Reinstall the valve cover.

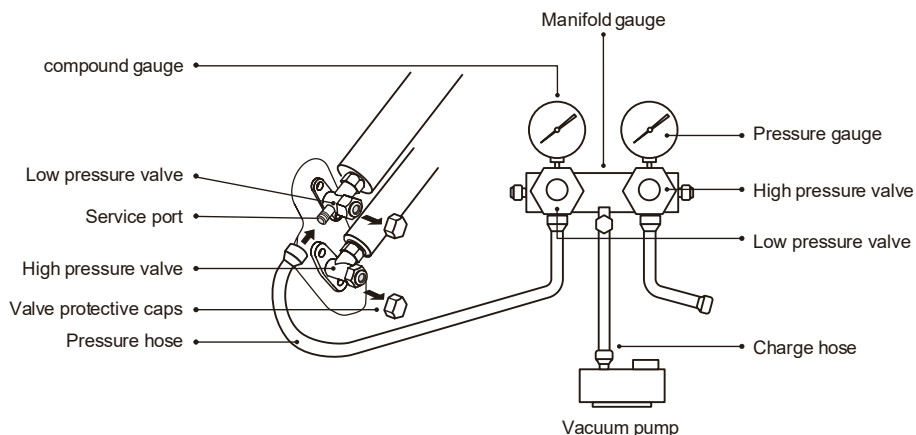

TEST OPERATION

Inspections Before Test Run

Do the following checks before test run.


Description	Inspection method
Electrical safety inspection	• Check whether the power supply voltage complies with specification. • Check whether there is any wrong or missing connection between the power lines, signal line and earth wires. • Check whether the earth resistance and insulation resistance comply with requirements.
Installation safety inspection	• Confirm the direction and smoothness of drainage pipe. • Confirm that the joint of refrigerant pipe is installed completely. • Confirm the safety of outdoor unit, mounting plate and indoor unit installation. • Confirm that the valves are fully open. • Confirm that there are no foreign objects or tools left inside the unit. • Complete installation of indoor unit air inlet grille and panel.
Refrigerant leakage detection	• The piping joint, the connector of the two valves of the outdoor unit, the valve spool, the welding port, etc., where leakage may occur. • Foam detection method: Apply soapy water or foam evenly on the parts where leakage may occur, and observe whether bubbles appear or not, if not, it indicates that the leakage detection result is safe. • Leak detector method: Use a professional leak detector and read the instruction of operation, detect at the position where leakage may occur. • The duration of leak detection for each position should last for 3 minutes or more; If the test result shows that there is leakage, the nut should be tightened and tested again until there is no leakage; After the leak detection is completed, wrap the exposed pipe connector of indoor unit with thermal insulation material and wrap with insulation tape.

Test Run Instruction

1. Turn on the power supply.
2. Press the ON/OFF button on the remote controller to turn on the air conditioner.
3. Press the Mode button to switch the mode COOLING and HEATING.
In each mode set as below:
 - COOLING-Set the lowest temperature
 - HEATING-Set the highest temperature
4. Run about 8 minutes in each mode and check all functions are properly run and respond the remote controller. Functions check as recommended:
 - 1) If the outlet air temperature responds to the cooling and heating modes
 - 2) If the water drains properly from the drainage hose
 - 3) If the Louver and deflectors(optional) rotate properly
5. Observe the test run state of the air conditioner at least 30 minutes.
6. After the successfully test run, return the normal setting and press ON/OFF button on the remote controller to turn off the unit.
7. Inform the user to read this manual carefully before use, and demonstrate to the user how to use the air conditioner, the necessary knowledge for service and maintenance, and the reminder for storage of accessories.

Note: If the ambient temperature exceeds the range mentioned in the section OPERATION INSTRUCTIONS, and it can not run COOLING or HEATING mode, lift the front panel and refer to the emergency button operation to run the COOLING and HEATING mode.

MAINTENANCE

 Warning	- When cleaning, you must shut down the machine and cut off the power supply for more than 5 minutes. - Under no circumstances should the air conditioner be flushed with water. - Volatile liquid (e.g. thinner or gasoline) will damage the air conditioner, so only use soft dry cloth or wet cloth dipped with neutral detergent to clean the air conditioner. - Pay attention to cleaning the filter screen regularly to avoid dust covering which will affect the filter screen effect. When the operating environment is dusty, the cleaning frequency should be increased appropriately. - After removing the filter screen, do not touch the fins of the indoor unit to avoid scratching.
Clean the unit	 Wring it dry and gently wipe the surface of the unit Tip: Wipe frequently to keep air conditioner clean and good appearance .
Disassembly and assembly of filter	- Grasp the raised handle on the filter by hand, and then pull the filter out in the direction deviating from the unit, so that the upper edge of the filter is separated from the unit. The filter can be removed by lifting the filter upwards. - When installing the filter, first insert the lower end of the filter screen into the corresponding position of the unit, and then squeeze the upper end of the filter into the corresponding buckling position of the unit body. 
Clean the filter	 Take out the filter from the unit Clean the filter with soapy water and air dry it Replace the filter Tip: When you find accumulated dust in the filter, please clean the filter in time to ensure the clean, healthy and efficient operation inside the air conditioner.
Service and maintenance	- When the air conditioner is not in use for a long time, do the following work: Take out the batteries of the remote controller and disconnect the power supply of the air conditioner. - When starting to use after long-term shutdown: - Clean the unit and filter screen; - Check whether there are obstacles at the air inlet and outlet of indoor and outdoor units; - Check whether the drain pipe is unobstructed; Install the batteries of the remote controller and check whether the power is on.

TROUBLESHOOTING

MALFUNCTION	POSSIBLE CAUSES
The appliance does not operate	Power failure/plug pulled out.
	Damaged indoor/outdoor unit fan motor.
	Faulty compressor thermomagnetic circuit breaker.
	Faulty protective device or fuses.
	Loose connections or plug pulled out.
	It sometimes stops operating to protect the appliance.
	Voltage higher or lower than the voltage range.
	Active TIMER-ON function.
	Damaged electronic control board.
Strange odor	Dirty air filter.
Noise of running water	Back flow of liquid in the refrigerant circulation.
A fine mist comes from the air outlet	This occurs when the air in the room becomes very cold, for example in the "COOLING" or "DEHUMIDIFYING/DRY" modes.
A strange noise can be heard	This noise is made by the expansion or contraction of the front panel due to variations in temperature and does not indicate a problem.
Insufficient airflow, either hot or cold	Unsuitable temperature setting.
	Obstructed air conditioner intakes and outlets.
	Dirty air filter.
	Fan speed set at minimum.
	Other sources of heat in the room.
	No refrigerant.
The appliance does not respond to commands	Remote control is not close enough to indoor unit.
	The batteries of remote control need to be replaced.
	Obstacles between remote control and signal receiver in indoor unit.
The display is off	Active DISPLAY function.
	Power failure.
Switch off the air conditioner immediately and cut off the power supply in the event of:	Strange noises during operation.
	Faulty electronic control board.
	Faulty fuses or switches.
	Spraying water or objects inside the appliance.
	Overheated cables or plugs.
	Very strong smells coming from the appliance.

ERROR CODE ON THE DISPLAY

In case of error, the display on the indoor unit shown the following error codes:

Display	Description of the trouble
E1	Indoor room temperature sensor fault
E2	Indoor pipe temperature sensor fault
E3	Outdoor pipe temperature sensor fault
E4	Refrigerant system leakage or fault
E6	Malfunction of indoor fan motor
E7	Outdoor ambient temperature sensor fault
E0	Indoor and outdoor communication fault
E8	Outdoor discharge temperature sensor fault
E9	Outdoor IPM module fault
EA	Outdoor current detect fault
EE	Outdoor PCB EEPROM fault
EF	Outdoor fan motor fault
EH	Outdoor suction temperature sensor fault

DISPOSAL GUIDELINE (European)

This appliance contains refrigerant and other potentially hazardous materials. When disposing of this appliance, the law requires special collection and treatment. DO NOT dispose of this product as household waste or unsorted municipal waste.

When disposing of this appliance, you have the following options:

- Dispose of the appliance at designated municipal electronic waste collection facility.
- When buying a new appliance, the retailer will take back the old appliance free of charge.
- The manufacturer will also take back the old appliance free of charge.
- Sell the appliance to certified scrap metal dealers.
- Disposing of this appliance in the forest or other natural surroundings endangers your health and is bad for the environment. Hazardous substances may leak into the ground water and enter the food chain.



CONTENTS

Handling The Remote Control	1
Buttons & Functions	3
Remote Screen Icon	6
Operating Instructions	7
Battery Disposal	17


Handling The Remote Control

Inserting and Replacing Batteries

Your air conditioning unit may come with two batteries (depending on the model). Put the batteries in the remote control before use.

Steps:

1. Slide the back cover from the remote control downward, exposing the battery compartment.
2. Insert the batteries, paying attention to match up the (+) and (-) ends of the batteries with the symbols inside the battery compartment.
3. Slide the battery cover back into place.

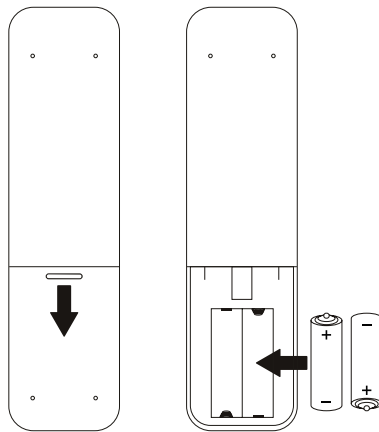

The image is for reference only; please refer to the actual product.

Battery Performance Tips

For optimal product performance:

- Use 2 LRO 3 AAA (1.5V) batteries.
- Do not use rechargeable batteries.
- Replace the old batteries with new ones of the same type when the display is no longer legible.
- Do not mix old and new batteries, or batteries of different brands.
- Do not leave batteries in the remote control if you don't plan on using the device for more than 2 months.

Tips For Using Remote Control

Recommendations for locating and using the remote control holder (if present).

The remote control be kept in a wall-mounted holder.


Notes For Using The Remote Control

1. Direct the remote control toward the Air conditioner.
2. Check that there are no objects between the remote control and the Signal receptor in the indoor unit.
3. Never leave the remote control exposed to the rays of the sun.
4. Keep the remote control at a distance of at least 1m from the television or other electrical appliances.


Specifications

Model	GYKQ-89E(ADW)/GYKQ-89E(GEN)
Rated Voltage	3V
Signal Receiving Range	8m
Environment	-5°C~60°C (23°F~140°F)

Buttons & Functions

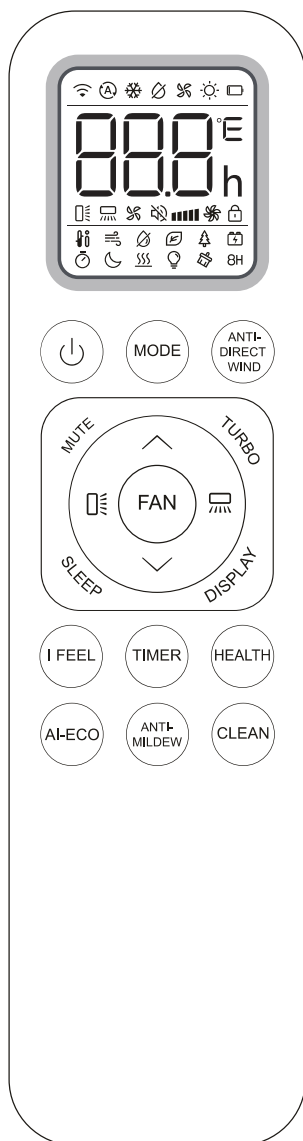

Remote control (I)

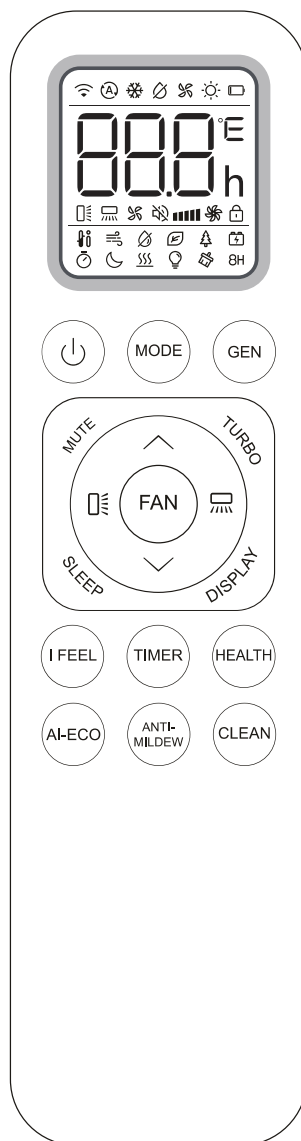

Remote control (II)

The display and some functions of the remote control may vary according to the model.

Remote controlle buttons

NO.	Button	Function
1		To turn on/off the air conditioner.
2	MODE	To select the mode operation: AUTO, COOL, DRY, FAN, HEAT.
3	ANTI-DIRECT WIND	Remote control (I): To activate/deactivate the ANTI-DIRECT WIND function. Remote control (II): Press ANTI-MILDEW + CLEAN buttons together for more than 3 seconds (depending on models).
4	GEN	Remote control (I): In the powered-on state, long press the MUTE button for 3 seconds to switch on/off the GENERATOR mode. Remote control (II): In the powered-on state, press the GEN button to switch on/off the GENERATOR mode.
5	MUTE	To switch-on/off the MUTE function.
6	TURBO	To activate/deactivate the TURBO function.
7	FAN	To select the fan speed of auto/mute/low/low-mid/mid/mid-high/high/turbo.
8	 (TEMP UP)	To increase the temperature or lengthen the time when setting the TIMER.
9	 (TEMP DN)	To decrease the temperature or reduce the time when setting the TIMER.
10		To stop or strat horizontal flaps louver movement or set the desired up/down air flow direction.
11		To stop or strat vertical deflectors louver movement or set the desired left/right air flow direction.
12	SLEEP	To switch-on/off the function SLEEP.
13	DISPLAY	To switch-on/off the LED display.
14	I FEEL	To activate the function of I FEEL.
15	TIMER	To set the time for timer on/off.
16	HEALTH	To activate/deactivate the HEALTH function(depending on models).
17	AI-ECO	1) To activate/deactivate the AI-ECO function. 2) Long press the button for 3 seconds to activate/deactivate the 8°C heating function (depending on models)
18	ANTI-MILDEW	To switch on/off the function ANTI-MILDEW.
19	CLEAN	To activate/deactivate the SELF-CLEAN function(depending on models).
20	RESET WiFi	To reset WiFi press MODE +  buttons together for more than 3 seconds (depending on models).

NO.	Button	Function
21	VOICE	To activate/deactivate the VOICE function, press MODE + ✓ buttons together for more than 3 seconds (depending on models).
22	I SET	To activate/deactivate the I SET function, press AI-ECO + ANTI-MILDEW buttons together for more than 3 seconds.
23	GENTLE WIND	To activate the function of GENTLE WIND, press FAN and MUTE buttons together for more than 3 seconds.
24	CHILD-LOCK	To activate the function of Child Lock, press MODE and TIMER buttons together for more than 3 seconds.
25	BLUETOOTH	To reset Bluetooth press MODE + TURBO buttons together for more than 3 seconds.
26	AUTO GEN	Remote control (I): To activate/deactivate the Auto Gen function, press MODE + MUTE buttons together for more than 3 seconds.
		Remote control (II): To activate/deactivate the Auto Gen function, press MODE + GEN buttons together for more than 3 seconds.

 The display and some functions of the remote control may vary according to the model.

 The shape and position of buttons and indicators may vary according to the model, but their functions are the same.

 The unit confirms the correct reception of each button press with a beep.

 Remind: Some functions may not be available on your air conditioner. If you press such a button, you will hear a beep, but the unit will not respond.

Remote Screen Icon

Remote controle DISPLAY, meaning of symbols on the liquid crystal display

NO.	Symbols	Meaning
1		AUTO mode indicator
2		COOLING mode indicator
3		DRY mode indicator
4		FAN mode indicator
5		HEATING mode indicator
6		BATTERY indicator
7		TEMPERATURE/ CLOCK indicator
8		FLAP SWING (Air flow) indicator
9		MUTE indicator
10		TURBO indicator
11		FAN SPEED indicator
		(FLASH) AUTO FAN indicator
12		CHILD LOCK indicator
13		I FEEL indicator
14		GENTLE WIND indicator
15		ANTI-MILDEW indicator
16		AI-ECO indicator
17		HEALTH indicator
18		GENERATOR mode indicator
19		TIMER indicator
20		SLEEP mode indicator
21		Auxiliary heating function indicator
22		DISPLAY LIGHT indicator
23		CLEAN function indicator
24		8°C heating function indicator

⚠ The display and some functions of the remote control may vary according to the model.


⚠ The shape and position of buttons and indicators may vary according to the model, but their functions are the same.

⚠ The unit confirms the correct reception of each button press with a beep.

Operating Instructions

Turn ON / Turn OFF the air conditioner

Press the button  to turn on or turn off the air conditioner.

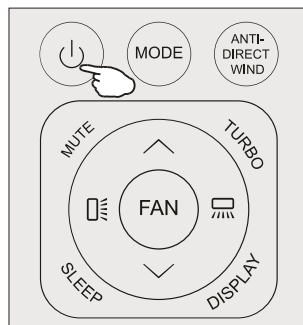


COOLING MODE



The cooling function allows the air conditioner to cool the room and reduce air humidity at the same time.

To activate the cooling function (COOL), press the **MODE** button until the symbol  appears on the display.

Use the  or  button to set a temperature lower than the current room temperature.

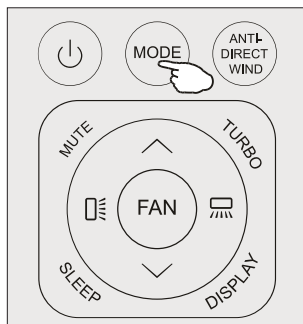

HEATING MODE



The heating function allows the air conditioner to heat the room.


To activate the heating function (HEAT), press the **MODE** button until the symbol  appears on the display.

Use the  or  button to set a temperature higher than the current room temperature.

 In HEATING operation, the appliance can activate a defrost cycle automatically, which is essential to clean the frost on the condenser so as to recover its heat exchange function. This procedure usually lasts for 2-10 minutes.

During defrosting, the indoor unit fan stop operation.

After defrosting, it returns to HEATING mode automatically.

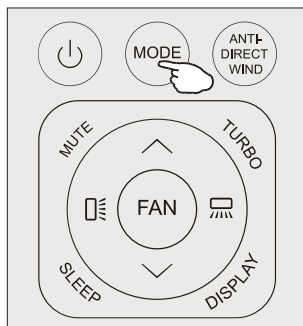

DRY MODE



This function reduces the humidity of the air to make the room more comfortable.

To set the DRY mode, Press **MODE** until  appears in the display. An automatic function of presetting is activated.

FAN MODE(Not FAN button)



Fan mode, air ventilation only.

To set the FAN mode, Press **MODE** until  appears on the display.

AUTO MODE



Automatic mode.

To set the AUTO mode, press **MODE** until  appears on the display.

In AUTO mode the unit will operate according to the room temperature automatically.

ANTI-DIRECT WIND (Optional)




To activate the ANTI-DIRECT WIND function, follow these steps based on your remote control type:


- Remote control (I) : press the **ANTI-DIRECT WIND** button;
- Remote control (II) : Press **ANTI-MILDEW** + **CLEAN** buttons together for more than 3 seconds;

After activation, the symbol  appears on the display. Anti-direct wind is only effective in COOLING, DRY, and FAN modes when the device is powered on. It is not effective in HEATING and AUTO modes.


When the Anti-direct wind feature is enabled, press the  button will disable the anti-direct blow feature.

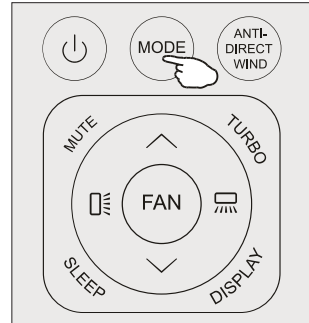

Remote control (I) :

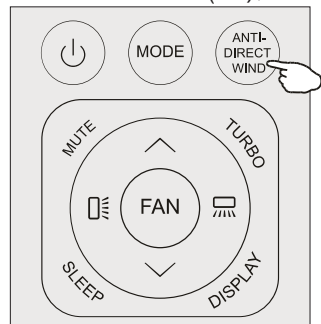


Remote control (II) :



MUTE function



1. Press **MUTE** button to activate this function, and  will appear on the remote display. Do it again to deactivate this function.
2. When the MUTE function runs, the indoor unit will operate at lowest fan speed to help experience a quiet feeling.
3. When press **FAN** / **TURBO** button, the MUTE function will be cancel. MUTE function can not be activated under dry mode.

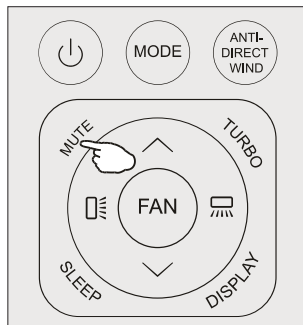


TURBO function



To activate turbo function, press the **TURBO** button, and  will appear on the display.
Press again to cancel this function.

In COOL/HEAT mode, when you select **TURBO** feature, the appliance will operate the fast cooling/fast heating with the highest fan speed.

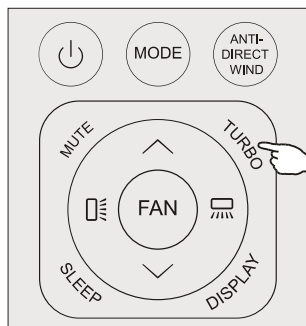

SLEEP MODE




Pre-setting automatic operating program.

Press **SLEEP** button to activate the sleep mode, and  appears on the display.
Press again to cancel this mode.

In sleep mode, the air conditioner will adjust the temperature automatically to make the room more comfortable during the night.


After 10 hours running in sleep mode, the air conditioner will change to the previous setting mode.

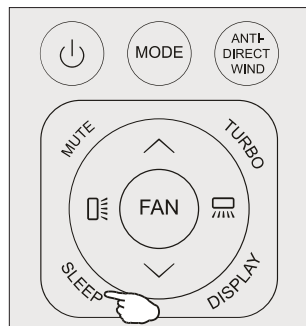

FAN SPEED function (FAN button)

Press **FAN** button to set the running fan speed, it can be set to AUTO/ MUTE/ LOW/ MID-LOW/ MID/ MID-HIGH/ HIGH/TURBO speed.

Flashing

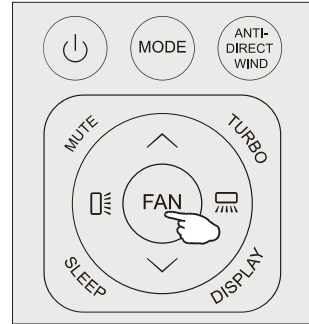


SWING function(Optional)

1. Normal 4 way air flow (vertical and horizontal):

- 1) Press to activate the horizontal flaps to swing from up to down. Press again to stop the swing movement at the current angle.
- 2) Press to activate the vertical deflectors to swing from left to right. Press again to stop the swing movement at the current angle.

2. Vector precise air flow

- 1) Press and hold for 1s, it will go into the horizontal vector air flow, you can select a small swing angle you want:




Stop selection for 5s, press again, exit the horizontal vector precise air flow.

- 2) Press and hold for 1s, it will go into the vertical vector air flow:



Stop selection for 5s, press again, exit the vertical vector precise air flow.

3. If the vertical deflectors are positioned manually which placed under the flaps, they are allowed to move the air flow direct to rightward or leftward.

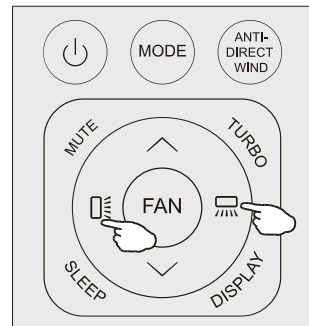


LED display light ON/OFF



Switch ON/OFF the LED display on panel.

Press **DISPLAY** button to switch off the LED display on the panel. Press again to switch on the LED display.

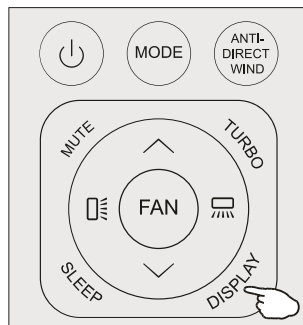


I FEEL function (Optional)



Press **I FEEL** button to activate the function, the  will appear on the remote display.

Do it again to deactivate this function.

This function enables the remote control to measure the temperature at its current location, and send this signal to the air conditioner to optimize the temperature around you and ensure the comfort.

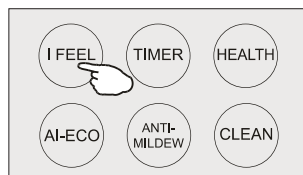


HEALTH function(Optional)



Press **HEALTH** button to activate / exit the health functions such as ion generator/ plasma etc.

Note: Health function is not available when the air conditioner is off.

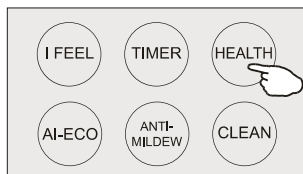

AI-ECO MODE (Optional)



In this mode the appliance auto-matically sets the operation to save energy.


While powered on, pressing the **AI-ECO** button in COOLING or HEATING mode at any temperature can enable or disable the AI-ECO function. The  icon will appear on the display, and the unit will enter AI-ECO mode, with an adjustable temperature range of 16-31°C.

- In COOLING mode, if AI-ECO is activated and the temperature is below 26°C, it will be adjusted to 26°C;
- In HEATING mode, if AI-ECO is activated and the temperature is above 25°C, it will be adjusted to 25°C;

Once AI-ECO is enabled, the adjustable temperature range is 16-31°C.

NOTE:

The AI-ECO function is available in both COOLING and HEATING modes.

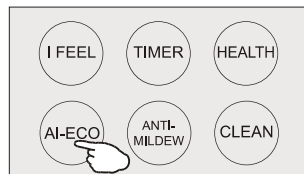


ANTI-MILDEW function (Optional)



Press **ANTI-MILDEW** button to activate the ANTI-MILDEW function,  will appear on the display. Do it again to deactivate this function.

After running COOL/DRY for more than 30 minutes, you can operate this function. Then, when the unit is turned off, the unit will blow airflow for about 15 minutes to dry the inner parts to avoid mildew, the last shuts off the unit.

Note: ANTI-MILDEW function only available in DRY/COOLING mode.

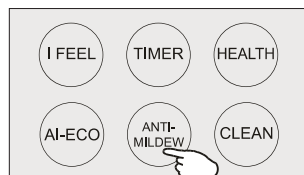

TIMER MODE----SET TIMER OFF



To set the air conditioner switching-off automatically.

With the AC on, press the **TIMER** button and then use the $\wedge$ and $\vee$ buttons to set the length of time before the AC will turn off. Press the **TIMER** button again to start the countdown.

Note: To cancel the timer function, press the **TIMER** button again.

Note: In case of power off, it is necessary to set TIMER OFF again.

TIMER MODE----SET TIMER ON





To set the air conditioner switching-on automatically.

With the AC off, press the **TIMER** button and then use the $\wedge$ and $\vee$ buttons to set the length of time before the AC will turn on. Press the **TIMER** button again to start the countdown.

When the timer setting was done, you can set the operation mode, fan speed, desired temperature, air flow when air conditioner star to run.

Note: To cancel the timer function, press the **TIMER** button again.

Note: In case of power off, it is necessary to set TIMER ON again.

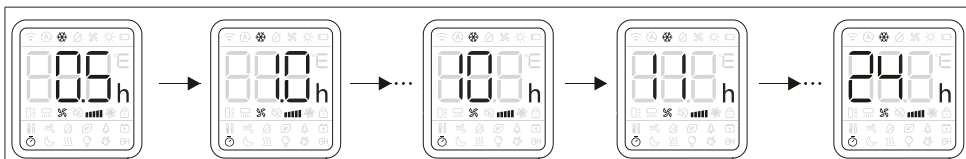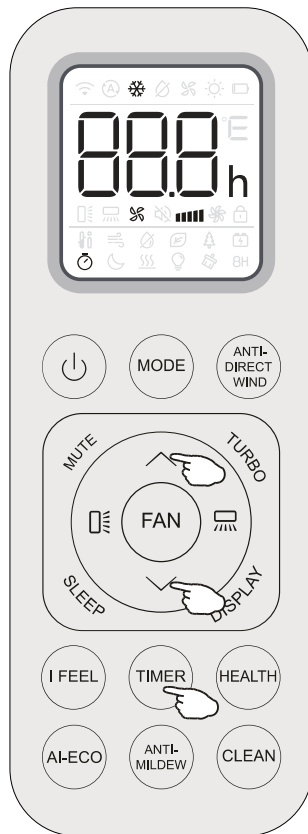


SELF-CLEAN function(Optional)



1. This function help carry away the accumulated dirt, bacteria, etc from the evaporator.
2. Turn off the air conditioner, press **CLEAN** button to enter this function and it will show "AC" on the display of indoor unit.
3. This function will run about 30 minutes, and it will exit automatically. You will hear 2 beeps when it's finished or cancelled.
4. It's normal if there are some noise during this function process, as plastic materials expand with heat and contract with cold.
5. We suggest operate this function as the following ambient condition to avoid certain safety.


Indoor unit	Temp < 30°C (86°F)
Outdoor unit	5°C (41°F) < Temp < 30°C (86°F)

6. We suggested operate this function once every 3 months.

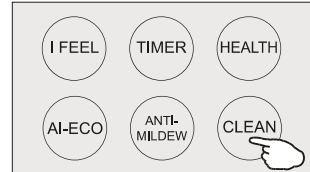

Child-Lock function

1. Long press **MODE** and **TIMER** button together to activate this function, and do it again to deactivate this function.
2. Under this function, no single button will activate.

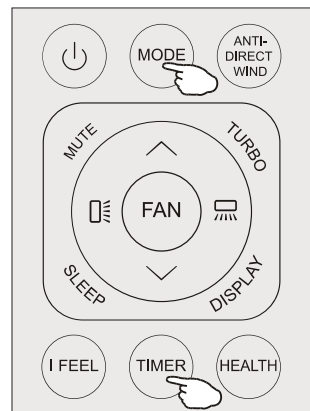


GENTLE WIND (Optional)



1. Turn on the indoor unit, and change to COOL mode, then long press **FAN** and **MUTE** button together 3 seconds to activate this function, will appear on the display.

Do it again to deactivate it.

2. This function will automatically close the vertical flaps, and give you the comfortable gentle wind feeling.

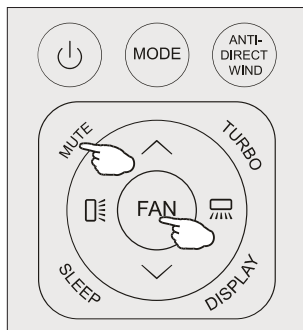

I SET function

Remember your favorite setting and run into it by press One button.


Remember the favorite setting:

1. In each mode (COOLING/ HEATING/ FAN/ DRY),long press **AI-ECO** and **ANTI-MILDEW** buttons over 3 seconds to remember it;
 2. When "AU" flashing appears on the remote control display, that means the remote control remember your favorite setting;
- Press any button to quit, and you can reset it by repeat 1, 2 operation.

Run into the favorite setting:

1. In each mode (COOLING/ HEATING/ FAN/ DRY), one press **AI-ECO** and **ANTI-MILDEW** buttons to activate;
2. The appliance will run as your favorite setting and you will see [AU] flashing on the remote control.
3. Press it again or other buttons to cancel this function.

These instructions are for reference only. The actual functions or display may differ from this manual. Please refer to the product itself as the final authority.

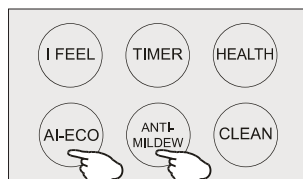

GENERATOR MODE (Optional)



The air conditioner works in generator mode, it is helpful for the unstable net power area.

Through GEN mode, you can choose the current level of the unit. There are six levels (L1,L2,L3,L4,L5,L6) in this mode, and the current increases in turn.

To activate the GEN function, follow these steps based on your remote control type:

- Remote control (I) : long press the button **MUTE** for 3 seconds ;
- Remote control (II) : press the button **GEN** ;

After activation, the unit current level will cycle as below:


OFF→L6→L5→L4→L3→L2→L1

To activate the GEN function, follow these steps based on your remote control type:


- Remote control (I) : long press the button **MUTE** for 3 seconds until code OF appers on the display ;
- Remote control (II) : press the button **GEN** until code OF appers on the display.

For areas with unstable power supply, users can independently select the operation gear when using generator power. Gear L1 represents the operation with the minimum current, and gear L6 represents the operation with the maximum current.

Remote control (I) :

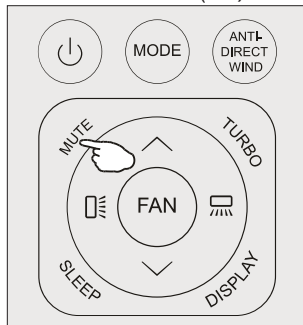


Remote control (II) :



8°C heating function (Optional)

8H


1. Long press **AI-ECO** button over 3 seconds to activate this function, and [8°C]([46°F]) will appear on the remote display.
2. This function will auto start the heating mode when the room temperature is lower than 8°C(46°F), and it will stop heat if the temperature reaches 9°C(48°F).
3. When the AC was turn off, Long press **AI-ECO** button over 3 seconds, the appliance will cancel this function automatically.

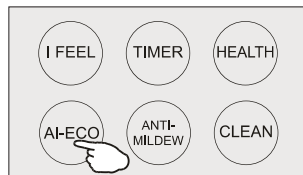

°C / °F Switch

For some models of the remote control, you can program the temperature display between °C and °F.

1. Press and hold the **TURBO** or **FAN** button for more than 5 seconds to enter the change mode.
2. Continue pressing and holding the **TURBO** or **FAN** button until it switches to °C or °F.
3. Then, release the button and wait for 5 seconds; the function will then be selected.

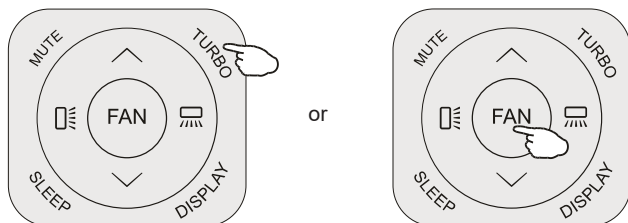

Battery Disposal


Battery Disposal

- Do not dispose of batteries as unsorted municipal waste. Refer to local laws for proper disposal of batteries.
- Batteries may have a chemical symbol at the bottom of the disposal icon. This chemical symbol means that the battery contains a heavy metal that exceeds a certain concentration. An example is Pb: Lead (>0.004%).
- Appliances and used batteries must be treated in a specialized facility for reuse, recycling, and recovery. By ensuring correct disposal, you will help avoid possible negative consequences for the environment and human health.



These instructions are for reference only. The actual functions or display may differ from this manual. Please refer to the product itself as the final authority.


Accessory List

Indoor unit						
Indoor	Owner's manual	WIFI Owner's manual	Remote control	Remote control holder	Battery	Indoor and Outdoor Connecting Wiring
						
1 unit	2 pieces	2 pieces	1 piece	1 piece	2 pieces	1 set


Outdoor unit							
Outdoor	Connecting Pipe	Installation binder	Drainage Pipe		Insulating bushing	Screw	Sealing Mud
							
1 unit	2 pieces	1 piece	1 piece	2 pieces	1 piece	1 bag	1 piece

Disassembly Figure

Indoor unit

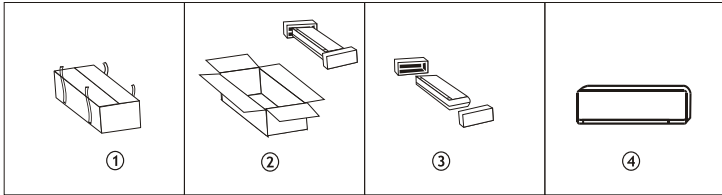

Outdoor unit

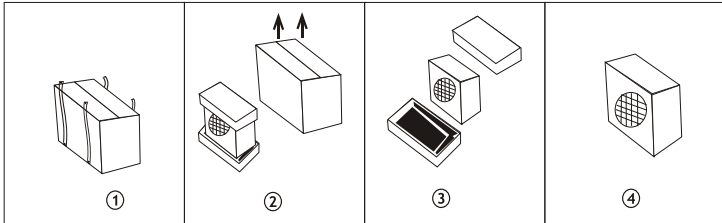

* Replacement cord instructions, type Y attachment.

If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.

Technical Specifications

Model No.			30K	30K	36K	36K
Type			Cooling only	Heating Pump	Cooling only	Heating Pump
Rated Cooling capacity (T1)		Btu/h	28200	29000	33000	36000
Rated Cooling capacity (T1)		kW	8.25	8.50	9.65	10.55
Rated Cooling capacity (T3)		Btu/h	24600	24800	30000	31800
Rated Cooling capacity (T3)		kW	7.20	7.25	8.80	9.30
Rated Heating capacity		W	/	8500	/	10500
EER for cooling (T1)		Btu/h/W	11.85	11.85	12.15	11.90
EER for cooling (T3)		Btu/h/W	9.30	9.15	9.05	9.05
COP for heating		W/W	/	3.80	/	3.60
Pressure	High(DP)	MPa	4.5			
	Low(SP)	MPa	1.9			
Indoor noise level at cooling		High	dB(A)	53	51	53
Outdoor noise level		dB(A)	61	62	60	64
Climate type			T3			
Power supply			220-240V,50/60Hz			
Current	Cooling (T1)	A	10.6	11.0	12.0	13.7
	Cooling (T3)	A	11.9	12.0	14.7	15.9
	Heating	A	/	10.0	/	13.2
Power input	Cooling (T1)	W	2375	2444	2715	3029
	Cooling (T3)	W	2649	2715	3317	3519
	Heating	W	/	2236	/	2916
Rated Current	Cooling (T1)	A	18.0	17.0	19.0	20.5
	Cooling (T3)	A	18.0	17.0	19.0	20.5
	Heating	A	/	15.0	/	19.0
Rated Power input	Cooling (T1)	W	4140	4000	4280	4600
	Cooling (T3)	W	4140	4000	4280	4600
	Heating	W	/	3500	/	3800
Refrigerant		kg	R32/0.97kg	R32/1.36kg	R32/1.07kg	R32/1.96kg
Indoor air volume(Cooling/Heating)		m³/h	1700	1700/1700	1900	1900/1750
Net dimensions (WxDxH)	Indoor	mm	1220x360x251	1220x360x251	1400x370x280	1400x370x280
	Outdoor	mm	920x380x699	967x421x803	967x421x803	967x421x803
Net weight	Indoor	Kg	16	16	21	23
	Outdoor	Kg	39	46	43.5	50.5
Wate Proof Protecting For Outdoor Side			IPX4			



Contact Our Consultants
8001242240



www.jcarabia.com
www.shop.york.com.sa



YORKksa



LinkedIn